

Mi • Light[®]

 
User Instruction

PIR LED Downlight

Model No.: FUTP02


One switch can sense many lights

One switch can sense many PIR downlights at the same time

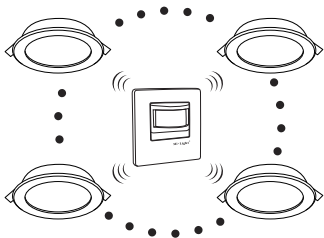

Many switches can sense the same light

 One PIR downlight can be controlled by no more than 20 sensor switches

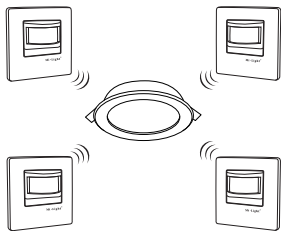

3. Link/Unlink

Link: When the switch is connected to power, press 'SET' one time, the red indicator will blink slowly, you are ready to link the lights to the switch, switch off the power of the lights which you want to link, turn on them again after 3 seconds, the lights will blink 3 times slowly, the link is done, press 'SET' once again if you don't want to link more lights.

 
Unlink: If you want to unlink the lights which you have linked, do as below: When the switch is connected to power, hold 'SET' for a while, the red indicator will blink quickly, you are ready to unlink the lights to the switch, switch off the power of the lights which you want to unlink, turn on them again after 3 seconds, the lights will blink 10 times quickly, the unlink is done, press 'SET' once again if you don't want to unlink more lights.



Made in China

1. Product Description

- This product cannot work alone, it works with the PIR sensor switch, the receiving distance can reach as long as 30 meters.
- The PIR downlights have the function of automatic signal transmitting. The lamps can send each other signal within 30 meters, which makes the sensing distance limitless.

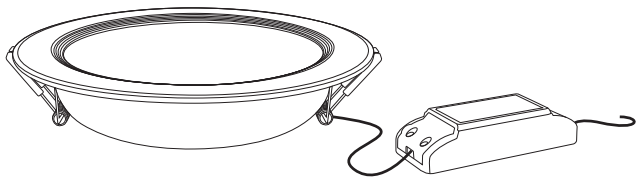

2. Technical Parameters


| | | | |
|------------------|-------------------|---------------|-------------|
| Model No. | FUTP02 | Lifespan | 50000 Hours |
| Power | 12W | CRI | > 80 |
| CRI | > 80 | Beam Angle | 120° |
| Light Efficiency | 88LM/W | PF | ≥0.65 |
| Voltage | AC86-265V 50/60Hz | White LED | 2835 (0.5W) |
| Size | Φ 180*40mm | White LED QTY | 24pcs |
| Hole Size | 145-150mm | Material | Aluminum |

3. Installation

- 1). This product is suitable for the ceiling-mounted installation.
- 2). Please open the hole on the ceiling according to the correct size of Diagram 1.
- 3). Connect the driver properly according to the wire connection Diagram 2. and then put the driver and wire into the ceiling from the hole.
- 4). Push in the two spring elements, make sure that they are deployed and anchored on the back of the ceiling.

Notice: Amateurs do not disassemble or install the lamps.

 - Lamp installation must be correct and strict, solid and reliable, avoid long time using in violent vibration place.
- The lamps send out normal quantity of heat during working. Please don't use any cover to cover the body of the lamps.

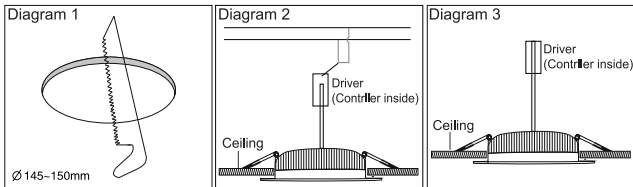

2.4G Wireless control, No wiring

One switch can sense many PIR downlights at the same time (Control distance 30m, the sensing distance can reach 8 meters)

Automatic Commands Transmitting Function

Mi light PIR lighting series can send to each other the commands from the sensor switch, which makes the sensing distance limitless. (The signal transmitting distance from one light to another can reach 30 meters)

